


# Power Contactors for Switching Motors

## Accessories and Spare Parts for SIRIUS 3RT Contactors and SIRIUS 3RH2 Contactor Relays

### Accessories

Link modules

PU (UNIT, SET, M) = 1  
 PS\* = 1 unit (unless otherwise specified)  
 PG = 41B

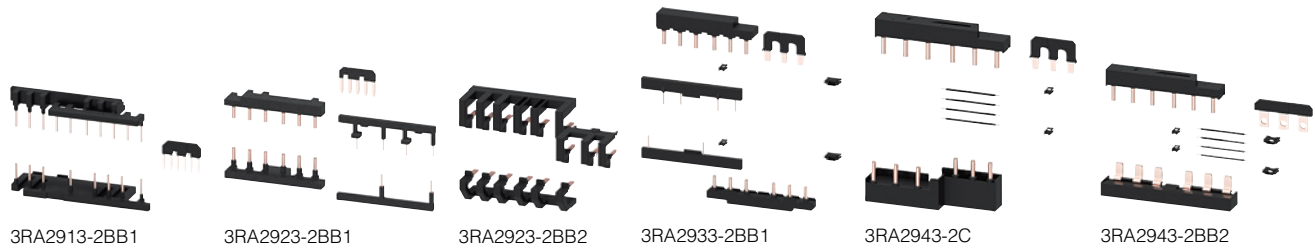

For con- tactors	Size	Version	SD	Screw terminals	SD	Spring-type terminals	
Type			d	Article No.	Price per PU	Article No.	Price per PU
<b>Assembly kits<sup>1)</sup> for contactor assemblies for star-delta (wye-delta) starting for making 3-pole contactor assemblies</b>							
3RT201	<b>S00-S00-S00</b>	The assembly kit contains: Mechanical interlock, four connecting clips for three contactors, a star jumper, wiring modules on the top and bottom <ul style="list-style-type: none"> <li>For main, auxiliary and control circuits</li> </ul>	▶	<b>3RA2913-2BB1</b>	▶	<b>3RA2913-2BB2</b>	
3RT202	<b>S0-S0-S0</b>	The assembly kit contains: Mechanical interlock, four connecting clips for three contactors, a star jumper, wiring modules on the top and bottom <ul style="list-style-type: none"> <li>For main, auxiliary and control circuits</li> <li>Only for main circuit</li> </ul>	▶	<b>3RA2923-2BB1</b>	▶	-- <b>3RA2923-2BB2</b>	
3RT202	<b>S0-S0-S0</b>	The assembly kit contains: Mechanical interlock, four connecting clips for three contactors, a star jumper, wiring modules on the top and bottom, 3-phase infeed terminal <ul style="list-style-type: none"> <li>For main, auxiliary and control circuits</li> </ul>	5	<b>3RA2924-2BB1</b>		--	
3RT203	<b>S2-S2-S0</b>	The assembly kit <sup>2)</sup> contains: Two connectors for three contactors, an S0 star jumper, a spacer, wiring modules on the top and bottom (S2-S0) for the main circuit, a cable set for the auxiliary circuit, a cable for connecting the A2 coil contact from the line contactor to the A2 coil contact of the delta contactor	▶	<b>3RA2933-2C</b>	▶	<b>3RA2933-2C</b>	
3RT203	<b>S2-S2-S2</b>	The assembly kit <sup>2)</sup> contains: Four connectors for three contactors, an S2 star jumper, a cable for connecting the A2 coil contact from the line contactor to the A2 coil contact of the delta contactor and <ul style="list-style-type: none"> <li>Wiring modules on the top and bottom for the main circuit and the auxiliary circuit</li> <li>Wiring modules on the top and bottom for the main circuit, a cable set for the auxiliary circuit</li> </ul>	▶	<b>3RA2933-2BB1</b>		-- <b>3RA2933-2BB2</b>	5
3RT204	<b>S3-S3-S2</b>	The assembly kit <sup>2)</sup> contains: Two connectors for three contactors, an S2 star jumper, a spacer, wiring modules on the top and bottom (S3-S2) for the main circuit, a cable set for the auxiliary circuit, a cable for connecting the A2 coil contact from the line contactor to the A2 coil contact of the delta contactor	2	<b>3RA2943-2C</b>	2	<b>3RA2943-2C</b>	
3RT204	<b>S3-S3-S3</b>	The assembly kit <sup>2)</sup> contains: Four connectors for three contactors, an S3 star jumper, a cable for connecting the A2 coil contact from the line contactor to the A2 coil contact of the delta contactor and <ul style="list-style-type: none"> <li>Wiring modules on the top and bottom for the main circuit and the auxiliary circuit</li> <li>Wiring modules on the top and bottom for the main circuit, a cable set for the auxiliary circuit</li> </ul>	2	<b>3RA2943-2BB1</b>		-- <b>3RA2943-2BB2</b>	2

<sup>1)</sup> When using the function modules for contactor assemblies for star-delta (wye-delta) starting, the wiring modules for the auxiliary current are not required.

<sup>2)</sup> The 3RA2934-2B mechanical interlock for sizes S2 and S3 must be ordered separately, see page 3/114.