

1.5 CPU 416

CPU 416	Order no.	Operating system firmware version	STEP 7 Version	Link to the download page
CPU 416-1	6ES7 416-1XJ00-0AB0	A3	---	Entry ID: 109475012
	6ES7 416-1XJ01-0AB0	A9	---	
	6ES7 416-1XJ02-0AB0	A9	---	
CPU 416-2	6ES7 416-2XK00-0AB0	A9	---	Entry ID: 109475012
	6ES7 416-2XK01-0AB0	A9	---	
	6ES7 416-2XK02-0AB0	V3.1.4	---	
	6ES7 416-2XK04-0AB0	V4.1.1	STEP 7 V5.2 SP1 HF3	Entry ID: 109474988
	6ES7 416-2XL00-0AB0	A9	---	Entry ID: 109475012
	6ES7 416-2XL01-0AB0	A9	---	
	6ES7 416-2XN05-0AB0	V5.3.5	STEP 7 V5.3 SP2	Entry ID: 109474827
	6ES7 416-2XP07-0AB0	V7.0.0	STEP 7 V5.4 + HSP261 V2.0/ S7 Distributed Safety V5.4 + SP5	
CPU 416F-2	6ES7 416-2FK02-0AB0	V3.1.4	---	Entry ID: 109475012
	6ES7 416-2FK04-0AB0	V4.1.1	STEP 7 V5.2 SP1 HF3	Entry ID: 109474988
	6ES7 416-2FN05-0AB0	V5.3.5	Step 7 V5.3 SP2/ S7 Distributed Safety V5.4	Entry ID: 109474827
	6ES7 416-2FP07-0AB0	V7.0.0	STEP 7 V5.4 + HSP261 V2.0/ S7 Distributed Safety V5.4 + SP5	
CPU 416-3	6ES7 416-3ER05-0AB0	V5.3.2	STEP 7 V5.4 SP4	Entry ID: 109474827
	6ES7 416-3XL00-0AB0	V3.1.4	---	Entry ID: 109475012
	6ES7 416-3XL04-0AB0	V4.1.1	STEP 7 V5.2 SP1 HF3	Entry ID: 109474988
	6ES7 416-3XR05-0AB0	V5.3.5	STEP 7 V5.3 SP2	Entry ID: 109474827
	6ES7 416-3XS07-0AB0	V7.0.0	STEP 7 V5.4 + HSP261 V2.0/ S7 Distributed Safety V5.4 SP5	